




Mounting the Sand Spreader to the FP5

- a. Remove the material discharge chute. This is done by removing the four 3/8 inch mounting bolts in the rear wall frame.

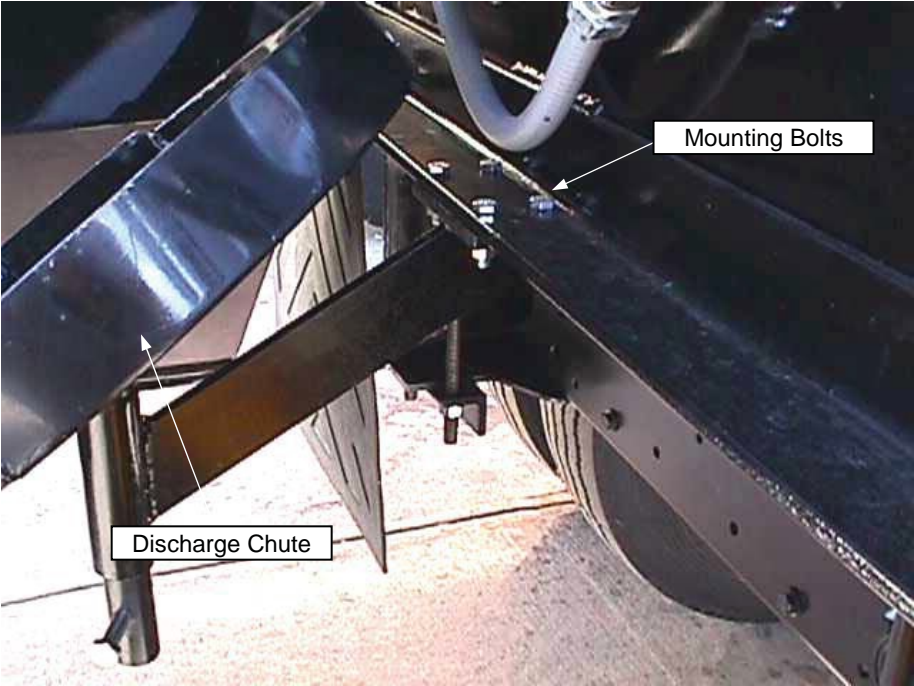

- b. Attach the sand spreader to the rear discharge box with the four mounting bolts.

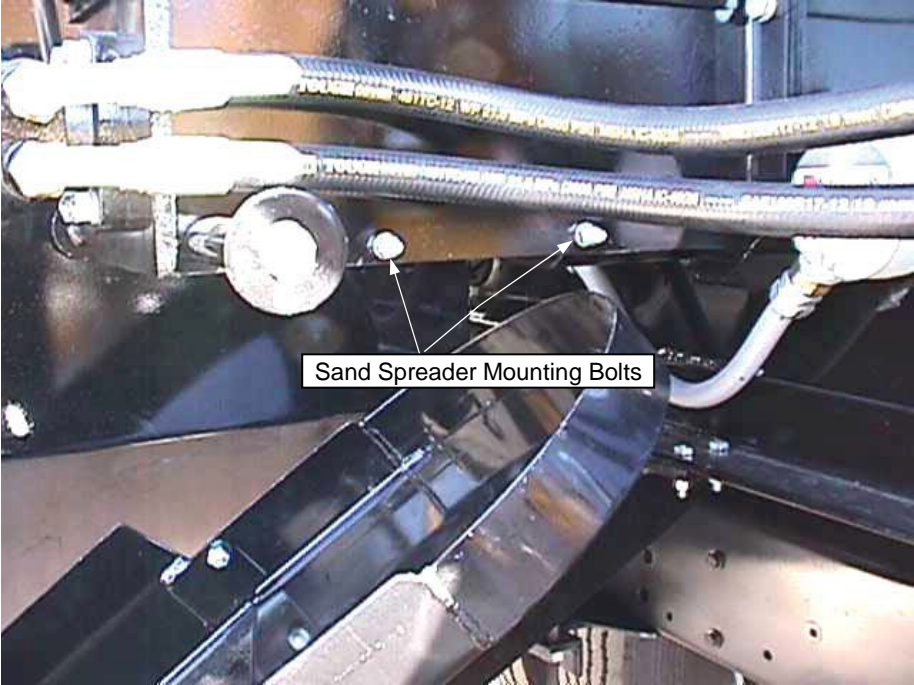

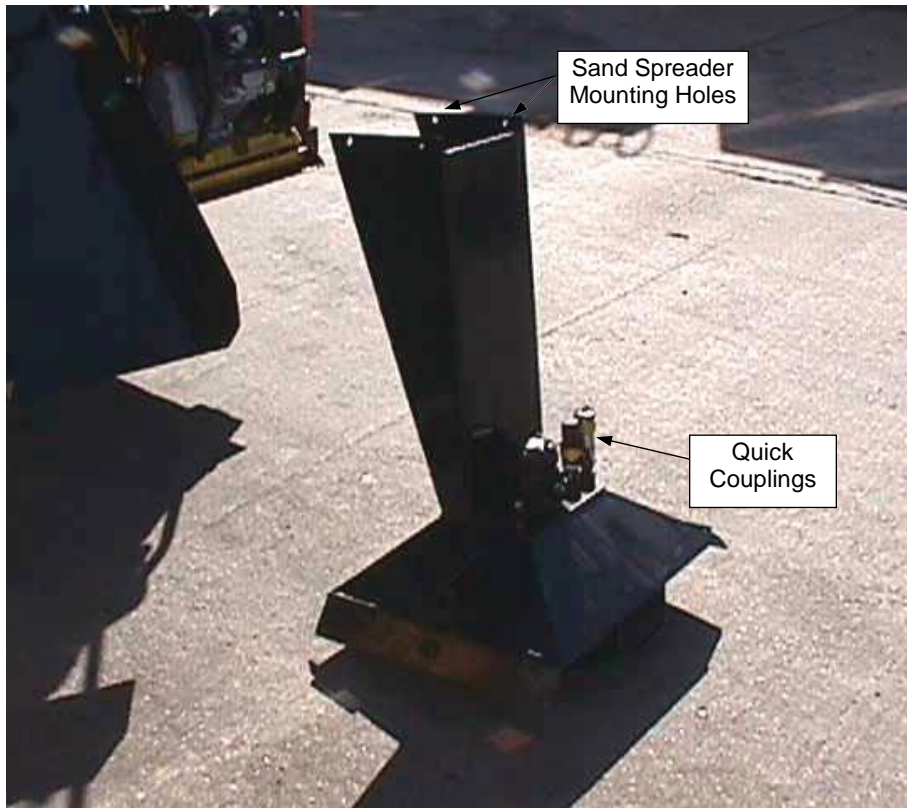

- c. Connect the auxiliary tools quick coupling hoses to the sand spreader attachment.

Sand Spreader Operations

- a. Activate the hydraulic selector valve to the SAND SPREADER mode by pushing it to the IN position.
- b. Pull the material auger valve at the rear operator's station to the FORWARD (OUT) position.
- c. Adjust the in-cab controls to 0% and engage the on/off switch.
- d. Engage the PTO.
- e. Adjust the speed of the auger and spinner as desired with the rheostat speed controls located on the control box.
- f. To temporarily stop the spreading operation while the vehicle is moving, turn the switch off to simultaneously stop the auger and spinner.

NEVER ENGAGE THE PTO WHEN THE VEHICLE IS MOVING

⚠ WARNING

Keep hands and feet clear of spinner at all times. Control of spinner is located in cab of truck and operator may not be aware of your presence at the sand spreader spinner. When performing maintenance, ensure personal safety by removing truck ignition key and keep on person until procedure is complete.